


INSTRUCTIONS FOR REPLACEMENT OF ANCHOR TUBE FOR SOFTSHIFT

- 1: DISASSEMBLY BEF. ANCHOR PIPE.**
- 2: DISASSEMBLY THE O-RING THAT SITS AGAINST THE VALVE
BODY.**
- 3: FIT THE O-RING ON THE NEW ANCHOR PIPE.**
- 4: FIT THE "SOFT SHIFT" ANCHOR TUBE (1258885).**
- 5: FIT IF POSSIBLE. ELECTRIC COIL.**
- 6: INSTALL NUT AND O-RING (853654) ON THE ANCHOR TUBE.**
- 7: MARK THE VALVE "T1 FOR NG6" OR "T3 FOR NG10 WHEN
INSTALLING THE ELECTRIC COIL IT SHOULD ALSO BE MARKED
ON THE VALVE.**

**EXAMPLE OF MARKING WITH 24 VOLT COIL "HIRSCHMANN" AND
SOFT SHIFT : RPE3-063C11/02400E1T1**

Pictures

Point: 1 +2+3+4

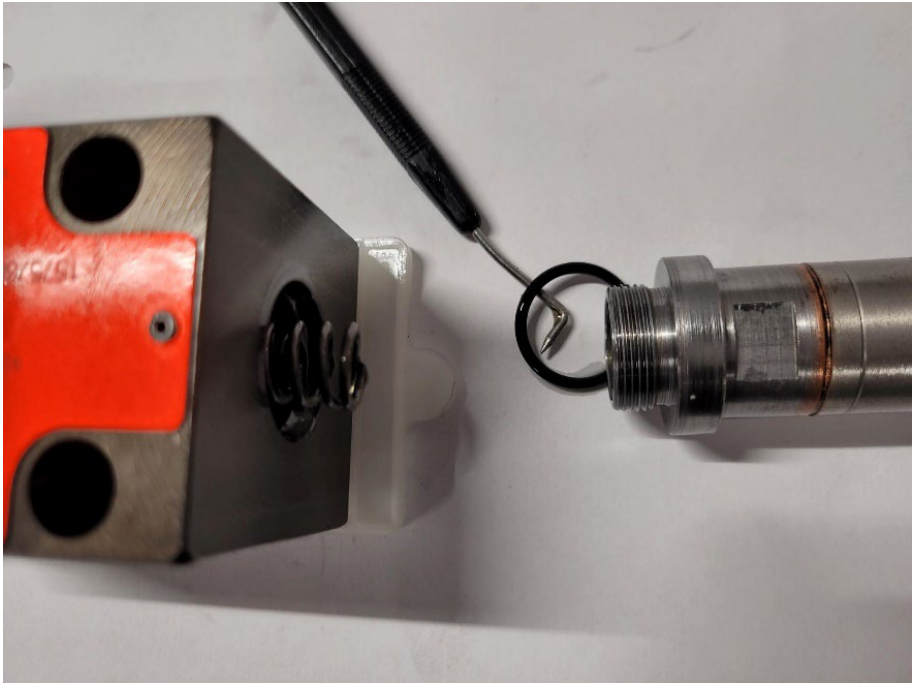

Pictures

Point: 5+6



Pictures

Point: 7

